


SIGHTS DIAGRAM


KEY-303

Rear Sight

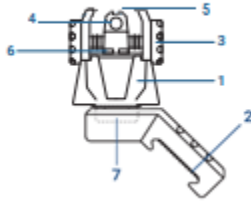

1. Rear sight body
2. Rear sight mounting screw
3. Rear sight diopter knob
4. Rear sight diopter with 4.5 mm aperture
5. Open sight
6. Open sight with flip down position
7. Rear sight back up spring for flipping up and down

Front Sight

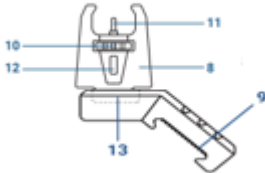

8. Front sight body
9. Front sight mounting screw
10. Front sight adjustment knob
11. Sight
12. Sight with flip down position.
13. Front sight back up spring for flipping up and down


How to Install

WARNING: Make sure the firearm is unloaded before installation.




1. Choose a location for the rear and front sights on the picatinny rail of the handguard. Loosen the mounting screws of the rear sight (2) and the front sight (9). For easier installation, flip up the rear and front sights to the "combat" position.
2. Tighten the mounting screws of the rear sight (2) and front sight (9) clockwise.

How to adjust the rear and front sights

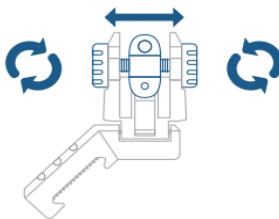

1. Lift the body of the rear sight (1). Turn the knob (3) clockwise to adjust the sight to the right, and counterclockwise to adjust the sight to the left.

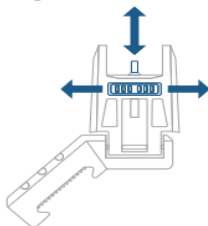

2. Lift the body of the front sight (8). Turn the sight adjustment knob (10) clockwise to adjust the front sight (11) up, and counterclockwise to adjust the front sight (11) down.



3. The rear sight and front sight also allow to aim the target in the folded position. The stable open rear sight (6) and front sight (12) installed on the body of the rear sight (1) and front sight (8) are for this purpose.

Rear Sight	Length	Width	Height
Deployed Dimensions	5.32 cm	5.78 cm	1.23 cm
Folded Dimensions	2.78 cm	5.78 cm	3.65 cm
Base Height	4.69 cm		
Weight	28 gr		

Front Sight	Length	Width	Height
Deployed Dimensions	5.32 cm	5.60 cm	1.23 cm
Folded Dimensions	2.76 cm	5.60 cm	3.65 cm
Base Height	4.56 cm		
Weight	24 gr		

TECHNICAL DIMENSIONS

