


KEY-604


M-LOK RAILS DIAGRAM

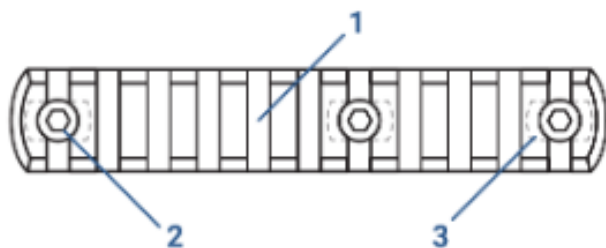

1. M-lok rail body
2. M-LOK mounting screws
3. M-LOK insert or M-LOK nut

How to Install

WARNING: Make sure the firearm is unloaded before installation.

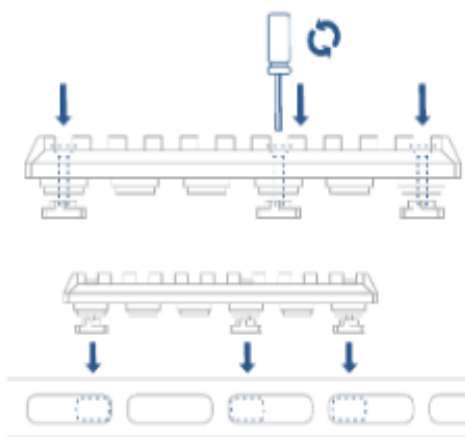


1. Loosen the M-LOK screws in such a way that the distance between the rail (1) and the insert (3) is bigger than the thickness of the handguard.
2. Choose the installation location. Place the M-LOK inserts (3) according to the grooves on the handguard (horizontally).



3. Use a hex key to countersink the screws (2) along with the inserts (3). Tighten the screws (2) clockwise until you feel resistance.
Warning: Do not apply excessive force when tightening, as this may damage the handguard.

How to disassemble the rail

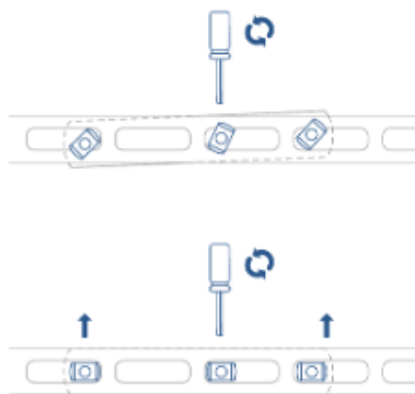

1. Loosen the screws (2) until there is slight play between the rail and the handguard.
2. Continue turning the hex key counterclockwise until the inserts (3) are in a horizontal position. Remove the rail (1) from the handguard.
Warning: Do not loosen the screw too much. In this case, the insert may fall inside the handguard.

KEY-604	Set Lengths	Width	Height
Dimensions	(11.98-9.98-7.98-5.98-3.98) cm	2.1 cm	1.02 cm
Set Weight	106 gr		

Slot Size	Weight
3 Slot	0.013 kg
5 Slot	0.017 kg
7 Slot	0.019 kg
9 Slot	0.025 kg
11 Slot	0.028 kg
Total Set Weight	0.106 kg

TECHNICAL DIMENSIONS

